

PSU da 12 V per manuale utente Hub 2

Aggiornato il 15 dicembre 2020

12V PSU per Hub 2 è un'unità di alimentazione, che collega i pannelli di controllo Hub 2 a sorgenti CC da 12 volt. Questa è una scheda elettronica, che sostituisce l'unità di alimentazione standard da 110/230 V nel corpo del dispositivo.

Installazione



La PSU da 12V per Hub 2 deve essere installata solo da un elettricista qualificato.

Prima di installare l'alimentatore, assicurarsi che il dispositivo sia scollegato dalla rete.

Quando si installa la PSU 12V per Hub 2, seguire le regole generali di sicurezza elettrica, nonché i requisiti degli atti normativi sulla sicurezza elettrica. Non smontare mai il dispositivo mentre è sotto tensione!

Processo di installazione:

1. Rimuovere le viti e togliere il dispositivo dal pannello di montaggio SmartBracket, spostandolo verso il basso con forza.



2. Switch off the device holding the power button for 2 seconds.

3. Disconnect power and Ethernet cables.



Wait 5 minutes for the capacitors to discharge.

4. Remove four screws of the back lid and take it off.



5. Remove the screws attaching the boards to the device body.




6. Carefully remove both boards, keeping them in the same plane and not disconnecting them. There is a connector between boards: do not break it.



7. Disconnect the power supply unit (smaller board) from the mainboard.
8. Connect 12V PSU for Hub 2 to the mainboard using the eight-pin connector between them. Do not warp or bend the antennas while replacing the board: this can cause the device to malfunction.



Please note: the board contacts should be plugged in the bottom row of the connector (closest to the board). When connected correctly, the boards are on the same level.

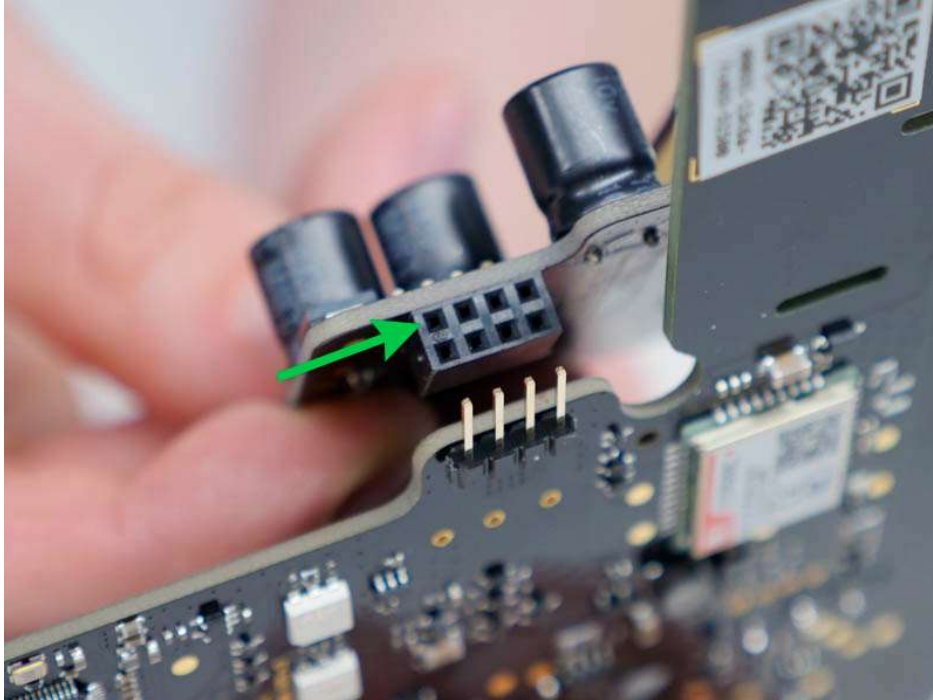

9. Reassemble the boards and the device body than tighten the screws.



Check that the battery and its cables are not clamped. When installed properly, the boards stand firmly on all guides and do not stagger. Holding the boards together with the back lid, turn the device over. The SIM card slot, power, and Ethernet sockets should match accurately and fit the corresponding sockets, and the power button should not be stuck. Change the information about input voltage on the device body to avoid incorrect power connections in the future. Use the special bundled sticker with the instruction.

10. Connect the power (and Ethernet cable) to the appropriate sockets.

11. Switch on the 12 V power source.



Do not connect the power cable with a voltage that exceeds the acceptable input voltage.

12. Switch on the device by holding the power button for 2 seconds.

13. Close and fix the SmartBracket mounting panel.

Switch on the device, wait until loading, and check the external power status in the Ajax app. If there is no power, and you are using a terminal adapter, check

the polarity of the connected wires. If there is no power even after reconnecting, please contact the Support Service.

Maintenance

The device does not require technical maintenance.

Tech specs

Input voltage	8-20 V DC
Output voltage	4.8 V DC \pm 3%
Switch on voltage	8 V DC \pm 2.5%
Switch off voltage	6.9-7.5 V (depending on load)
Max input current	< 1 A
Max output current	1,5 A
Connection to mains	Socket: 6.5 \times 2 mm Plug: 5.5 \times 2,1 mm
Dimensions	98 \times 70 \times 17 mm
Weight	28 g

Complete Set

1. Ajax 12V PSU for Hub 2
2. Terminal adapter
3. Quick start guide

Warranty

Warranty for the AJAX SYSTEMS MANUFACTURING Limited Liability Company products is valid for 2 years after the purchase.

If the device does not function correctly, please contact the Support Service first. In half of the cases, technical issues can be solved remotely!

Warranty Obligations

User Agreement

Technical support: **support@ajax.systems**